

Thank you for your purchase of The Summit Series tent.

This instruction will help speed up the setup process for your new tent. Please carefully read this instruction and recommendations.

Initial (New Unboxing to do and verify - you need to do this once at initial setup)

The center mast poles must be assembled. Put together the following items to form one mast set:

- Top (flag) fittings
- 9 ft aluminum poles
- Bottom (slider) assembly

When setting up the center mast, the recommended hole is the one just above the lowest setting. If needed, you can adjust it to extend higher to tighten the top.

When inserting the center mast into the tent top, you may need to cut off the top flag holes (outside) to ensure the mast fits properly. (Please see the picture.)

At one corner endpoint, tie the ratchet ropes. Pull the ropes tightly and cut them if necessary to ensure all the ropes are properly fitted to the tent.



General Safety Guidelines

- Use safety equipment such as gloves, hard hats, safety glasses, and vests.
- Use ground covers to ensure the tent top remains clean when setting up the tent.
- Handle knives carefully. Do **not** use a knife to open the tent top box, as it may puncture the tent.

Unboxing and Organizing Parts

- Group all poles and parts side by side when unboxing the tent, as many poles look similar.
- Pole dimensions:
 - **Spreader pole:** 9'-3"
 - **Leg pole:** 7'-10"
 - **Mast pole:** 8'-11"
 - **Spreader splicing:** Includes a 9" stopper to join two spreaders together.

Frame Assembly

1. **First Layout Formation:** Arrange the poles in the following order: **corner fitting - spreader - splicing - spreader - corner fitting**.
2. **Second Layout Formation:** In a perpendicular direction, add another **spreader - splicing - spreader - corner fitting**.
3. Repeat this layout for the third and fourth formations until you create a square shape.
4. Assemble the frame.
5. Cover the frame with the tent top, securing it to the four corner fittings using the webbing loops.
6. Ensure the last webbing loop with the webbing puller is secured to the last corner fitting.
7. Lift all valances to prevent them from being pinched by the corner fittings.

Leg Installation

1. Assemble all legs with their base plates and secure them using the provided bolts.
2. Lift one corner high enough to insert the leg assembly into the corner fitting. Repeat on the same side so the frame stands on two legs, allowing access underneath.
3. Lift the frame and insert the third leg.
4. A ladder or canopy lift may be needed to insert the fourth leg into the last corner fitting.
5. Ensure all legs are evenly spaced, and measure the diagonal distances to square the frame before staking the base plates.

Mast Pole and Flag Installation

1. Check the top hole at the peak and enlarge it if necessary to snugly fit the **1.125" diameter** flag holder.
2. Assemble the mast pole at its lowest hole position and insert it fully into the peak hole.
3. From outside the frame, insert the flag into its holder.
4. Inside the frame, position the mast pole (with the grooved metal-protected plate) **above** the top of the cross cable.
5. Slide the mast pole **up** until it meets the center of the cross cable.
6. Pull down the bottom cross cable and set it into the other groove.
7. Adjust the mast pole's height to ensure the diagonal top is properly tensioned. If it is too loose, extend the mast pole until it reaches the correct position.
8. Open the bottom bolt and install the **U-shaped safety metal plate** at the bottom of the mast.

Securing the Tent

1. Insert **four ratchet straps** into the corner fittings and tie them down to the stakes.
2. Insert **four additional ratchet straps** to pull the tension ropes to the base plates.
3. Tie the **outside sidewall ropes** to the stake tie-down points at the corner fittings **before** hanging the sidewalls.