




Quality Frame Tents for Rental and Commercial Industries

**CALL US: 800-997-8368**

EMAIL: [sales@centraltent.com](mailto:sales@centraltent.com)

Georgia Location: 889 Industrial Blvd Ringgold, GA 30736

Texas Location: 5911 Hamblen Dr, Humble, TX 77396, United States

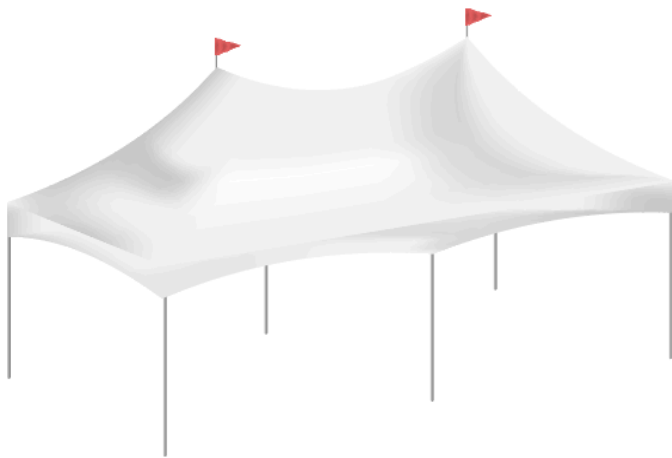

**15x30 QUICK PEAK TENT**

**INSTRUCTION:**

1. Layout all fittings (4 corners and 2 tee in the middle). Then lay out all 14 '4 " poles to form a perimeter. Insert all pins.
2. Hook one side of the cable with the other side. Do the same on the other corner.

**Hint: lift the other corner about chest height to loop the cable with a pin.**

15x30 Quick Peak Frame Tent			
Qty	FITTINGS		Part #
4	Corner - Quick Peak		C1053
2	Tee - Quick Peak		C1054
2	Mast Set for 15x		MAST15X
2	Cable Set 15x		CBQP15X
6	Base Plates - Quick Peak		C1011-Q
6	Ratchet Mid Spreader		C1063
6	Ratchet Ropes		ROPE003
13	Canopy Pins		P103
Qty	Size	DT Poles	Color
7	14'-4"	Spreader	
6	7'-8"	Legs	

3. Hook the cable on the other half of the tent. Make sure the cables are very tight when flat on the ground. The frame will have a little deflection (about .5 to 2 inches). If the cable is not tight or too tight, check the dimensions.
4. With the frame flatly on the ground, lay out the top. Make sure the top is not caught on the cable or fitting-this will tear the tent. All four corners of the top should be near the corner of the frame.
5. Put the corner ring into the outside tab on each corner. Do all four corners. Again, make sure the tent is not caught on the fittings or the cables. The final corner will need to be pulled with some force.
6. Lift up one side of the tent (the 30'side). Insert 3 legs (corner-center-corner).
7. Insert mast set. Then assemble the flags.
8. Roll up the mast onto one side of the cable, then roll it toward the center. Pull the other cable, then insert into the mast slot. Make sure to put the safety cap on (white color).
9. Lift the other side of the tent and insert the legs.
10. Pull the ring on each leg. Tie with a ratchet and loop it on to the baseplate at each leg. Do not tighten the ratchet initial-ly. After all the ratchets are assembled, go back and pull all the ratchets tight (this will make the tent evenly center).
11. Secured with stakes or other appropriate methods.

