



Quality Frame Tents for Rental and Commercial Industries

CALL US: 800-997-8368

EMAIL: sales@centraltent.com

Georgia Location: 889 Industrial Blvd Ringgold, GA 30736

Texas Location: 5911 Hamblen Dr, Humble, TX 77396, United States



30x30 STANDARD HIP END - FRAME TENT

INSTRUCTION:

1. Lay out four (4) corner fittings, four (4) tee fittings, one (1) 8-way top joint, eight (8) (red 14'4") spreader tubes, four (4) (green 16'1") rafter tubes and four (4) (red 21'10") hip rafter tubes.
2. Start assembling from the peak, insert all rafter and hip rafter tubes to the 8-way top joint, and pin it.
3. Connect all corners to the 21'10" hip rafter first, and pin them all.
4. Connect one of the corner legs to the tee fitting using 14'4" spreader tubes then

30x30 Standard Frame Tent			
Qty	FITTINGS		Part #
4	Corner		C1001
4	Side Tee Joint		C1003
1	8 Way Crown		C1007
48	Canopy Pins		P102
Qty	Size	Poles	Color
8	14'-4"	Spreader	Red
4	21'-10"	Hip Rafter	Red
4	16'-1"	Rafter	Green
8	7'-8"	Legs	Black

continue to connect from this tee to the opposite corner fittings, and pin them all. Do this for all perimeter tubes.

5. Connect all 16'1" rafters to the tee joints.

6. Place the canopy over the frames and pull it tightly. Secure it to the frame with buckled side straps. Tighten corner buckles first.

7. Raise one side of the canopy high enough to insert the leg tubes (black 7'8") into the corner fittings and insert pins.

8. Repeat step 7 for the opposite side of the canopy.

9. Insert all the remaining legs into the tee fittings and insert pins.

10. The canopy and frame can now be tied down.

Caution:

Tie-down only at the corner or tee fittings. Do not tie it to spreader tubes as they will bend.